


올림픽홀 대극장 조명 회로도

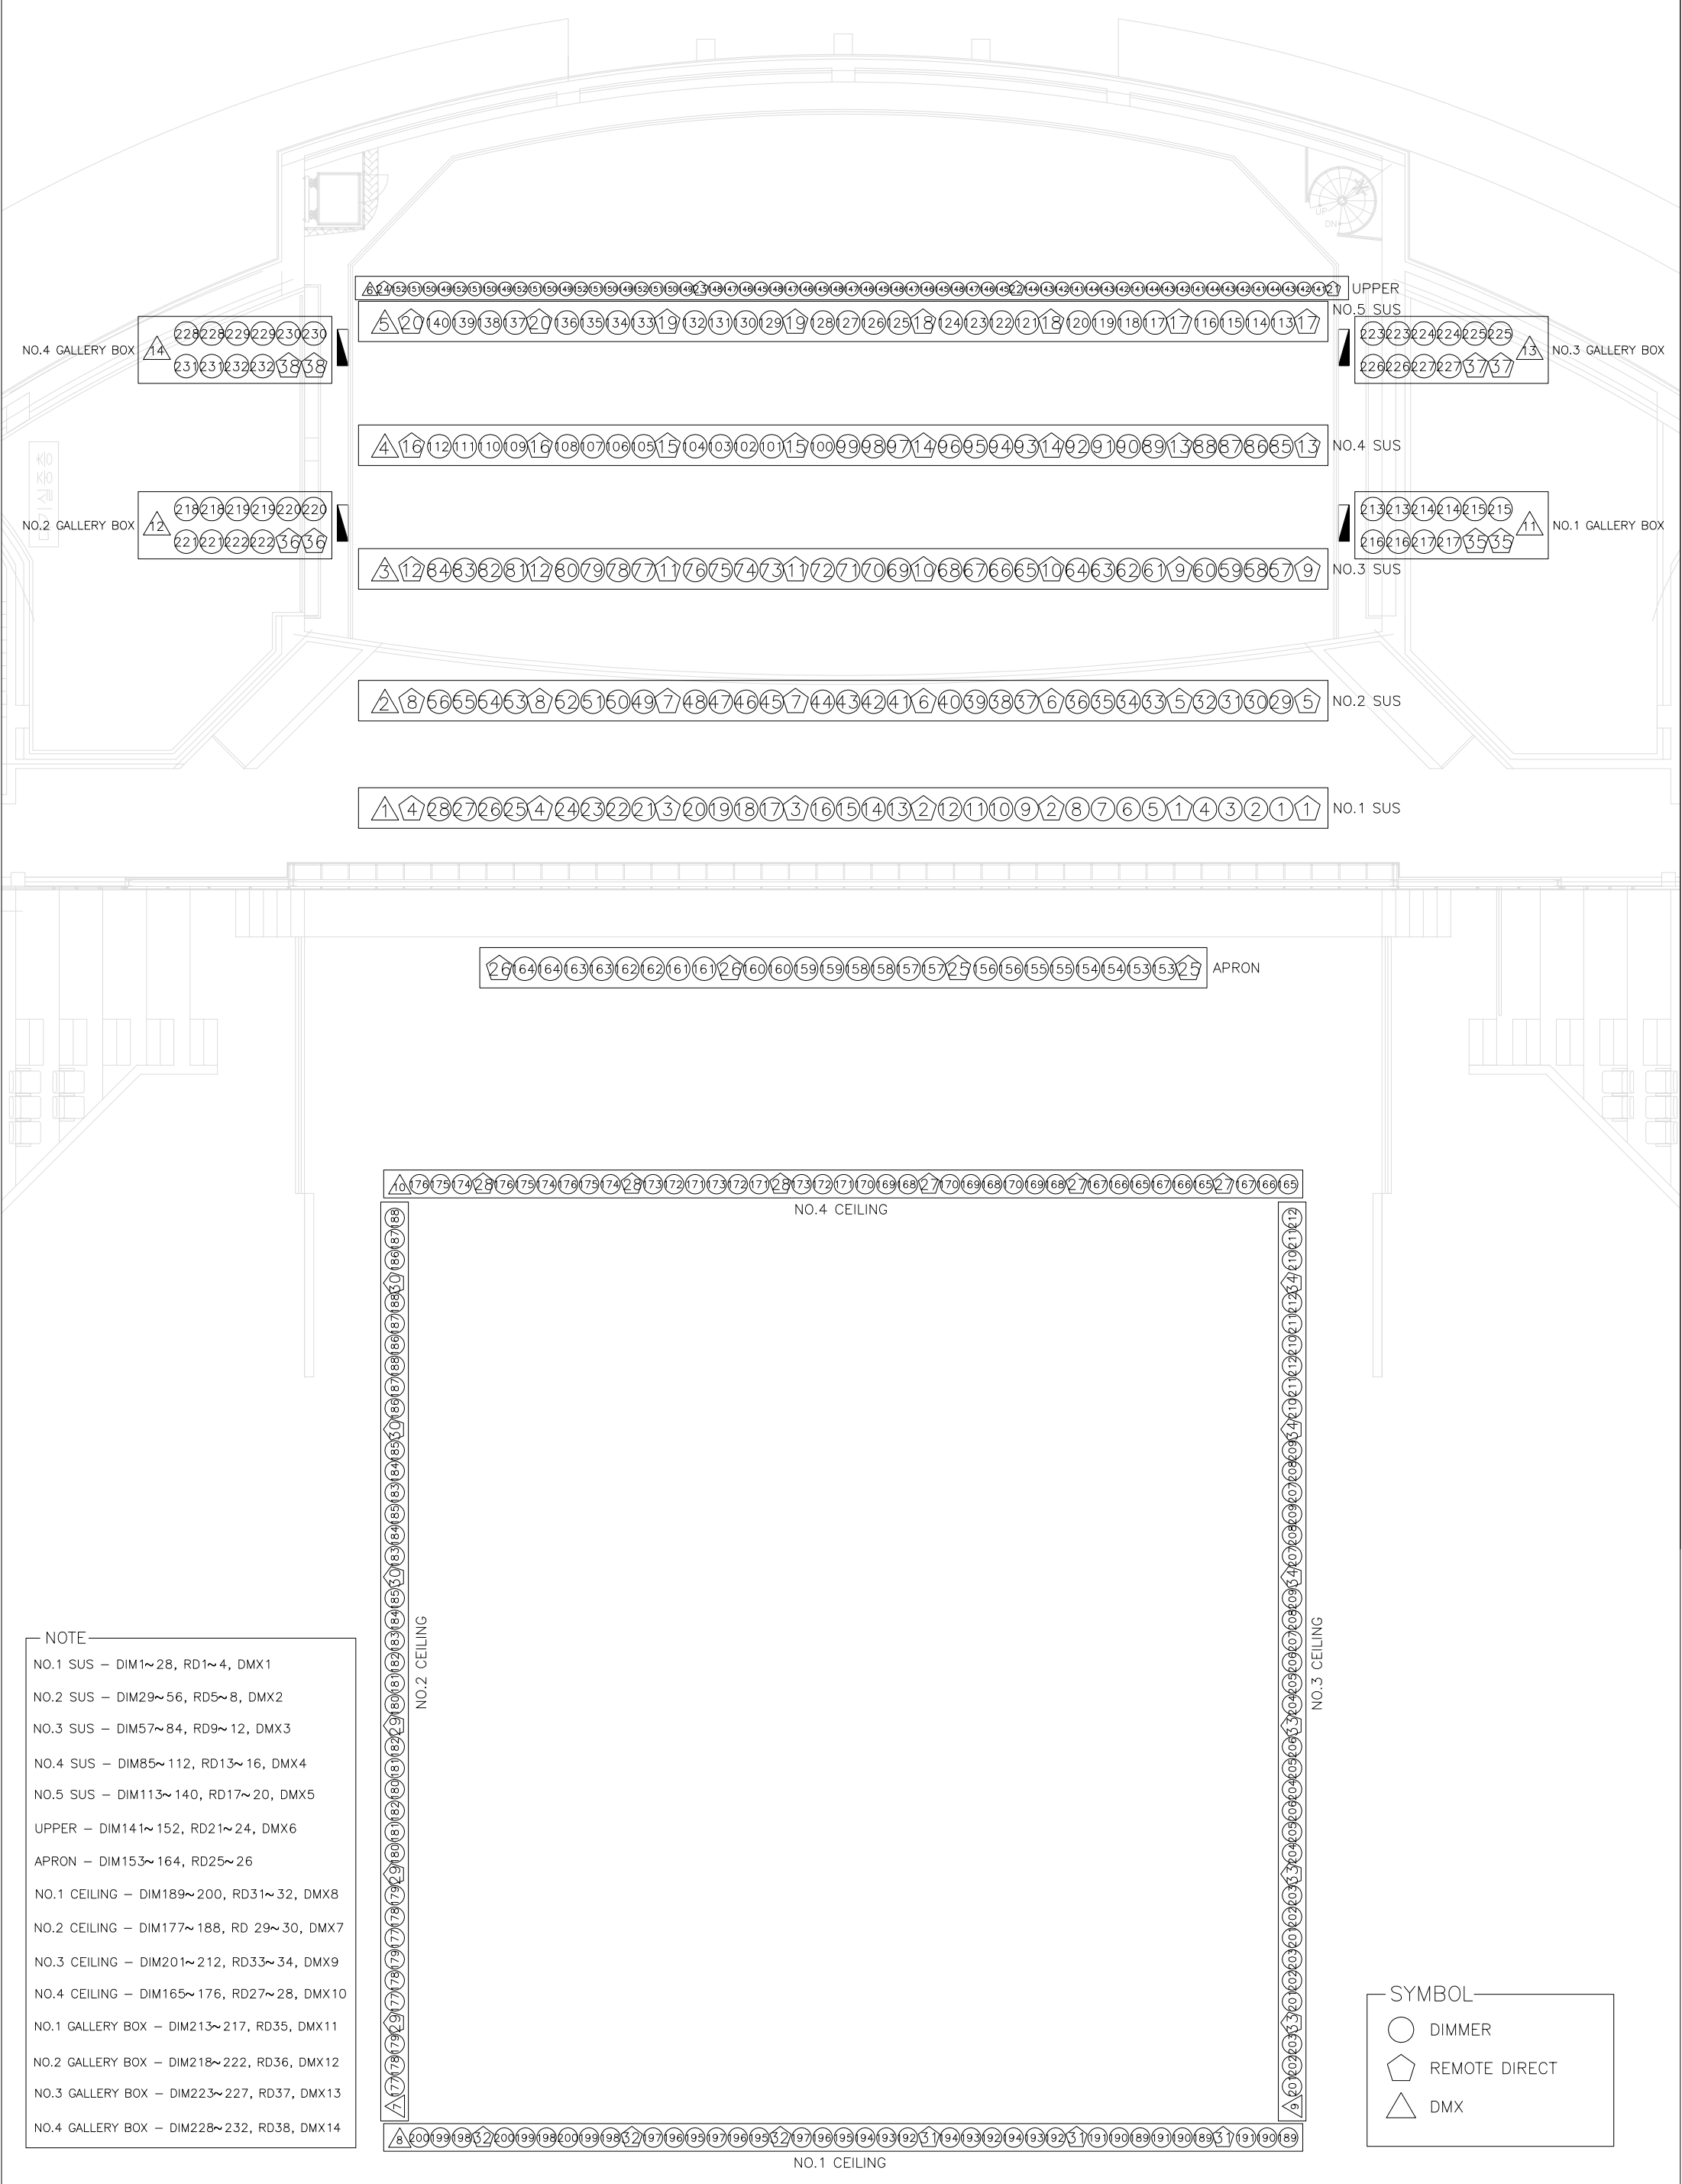


NOTE

- NO.1 SUS - DIM1~28, RD1~4, DMX1
- NO.2 SUS - DIM29~56, RD5~8, DMX2
- NO.3 SUS - DIM57~84, RD9~12, DMX3
- NO.4 SUS - DIM85~112, RD13~16, DMX4
- NO.5 SUS - DIM113~140, RD17~20, DMX5
- UPPER - DIM141~152, RD21~24, DMX6
- APRON - DIM153~164, RD25~26
- NO.1 CEILING - DIM189~200, RD31~32, DMX8
- NO.2 CEILING - DIM177~188, RD 29~30, DMX7
- NO.3 CEILING - DIM201~212, RD33~34, DMX9
- NO.4 CEILING - DIM165~176, RD27~28, DMX10
- NO.1 GALLERY BOX - DIM213~217, RD35, DMX11
- NO.2 GALLERY BOX - DIM218~222, RD36, DMX12
- NO.3 GALLERY BOX - DIM223~227, RD37, DMX13
- NO.4 GALLERY BOX - DIM228~232, RD38, DMX14

SYMBOL

- DIMMER
- ⬠ REMOTE DIRECT
- △ DMX

올림픽홀 대극장 조명 회로도

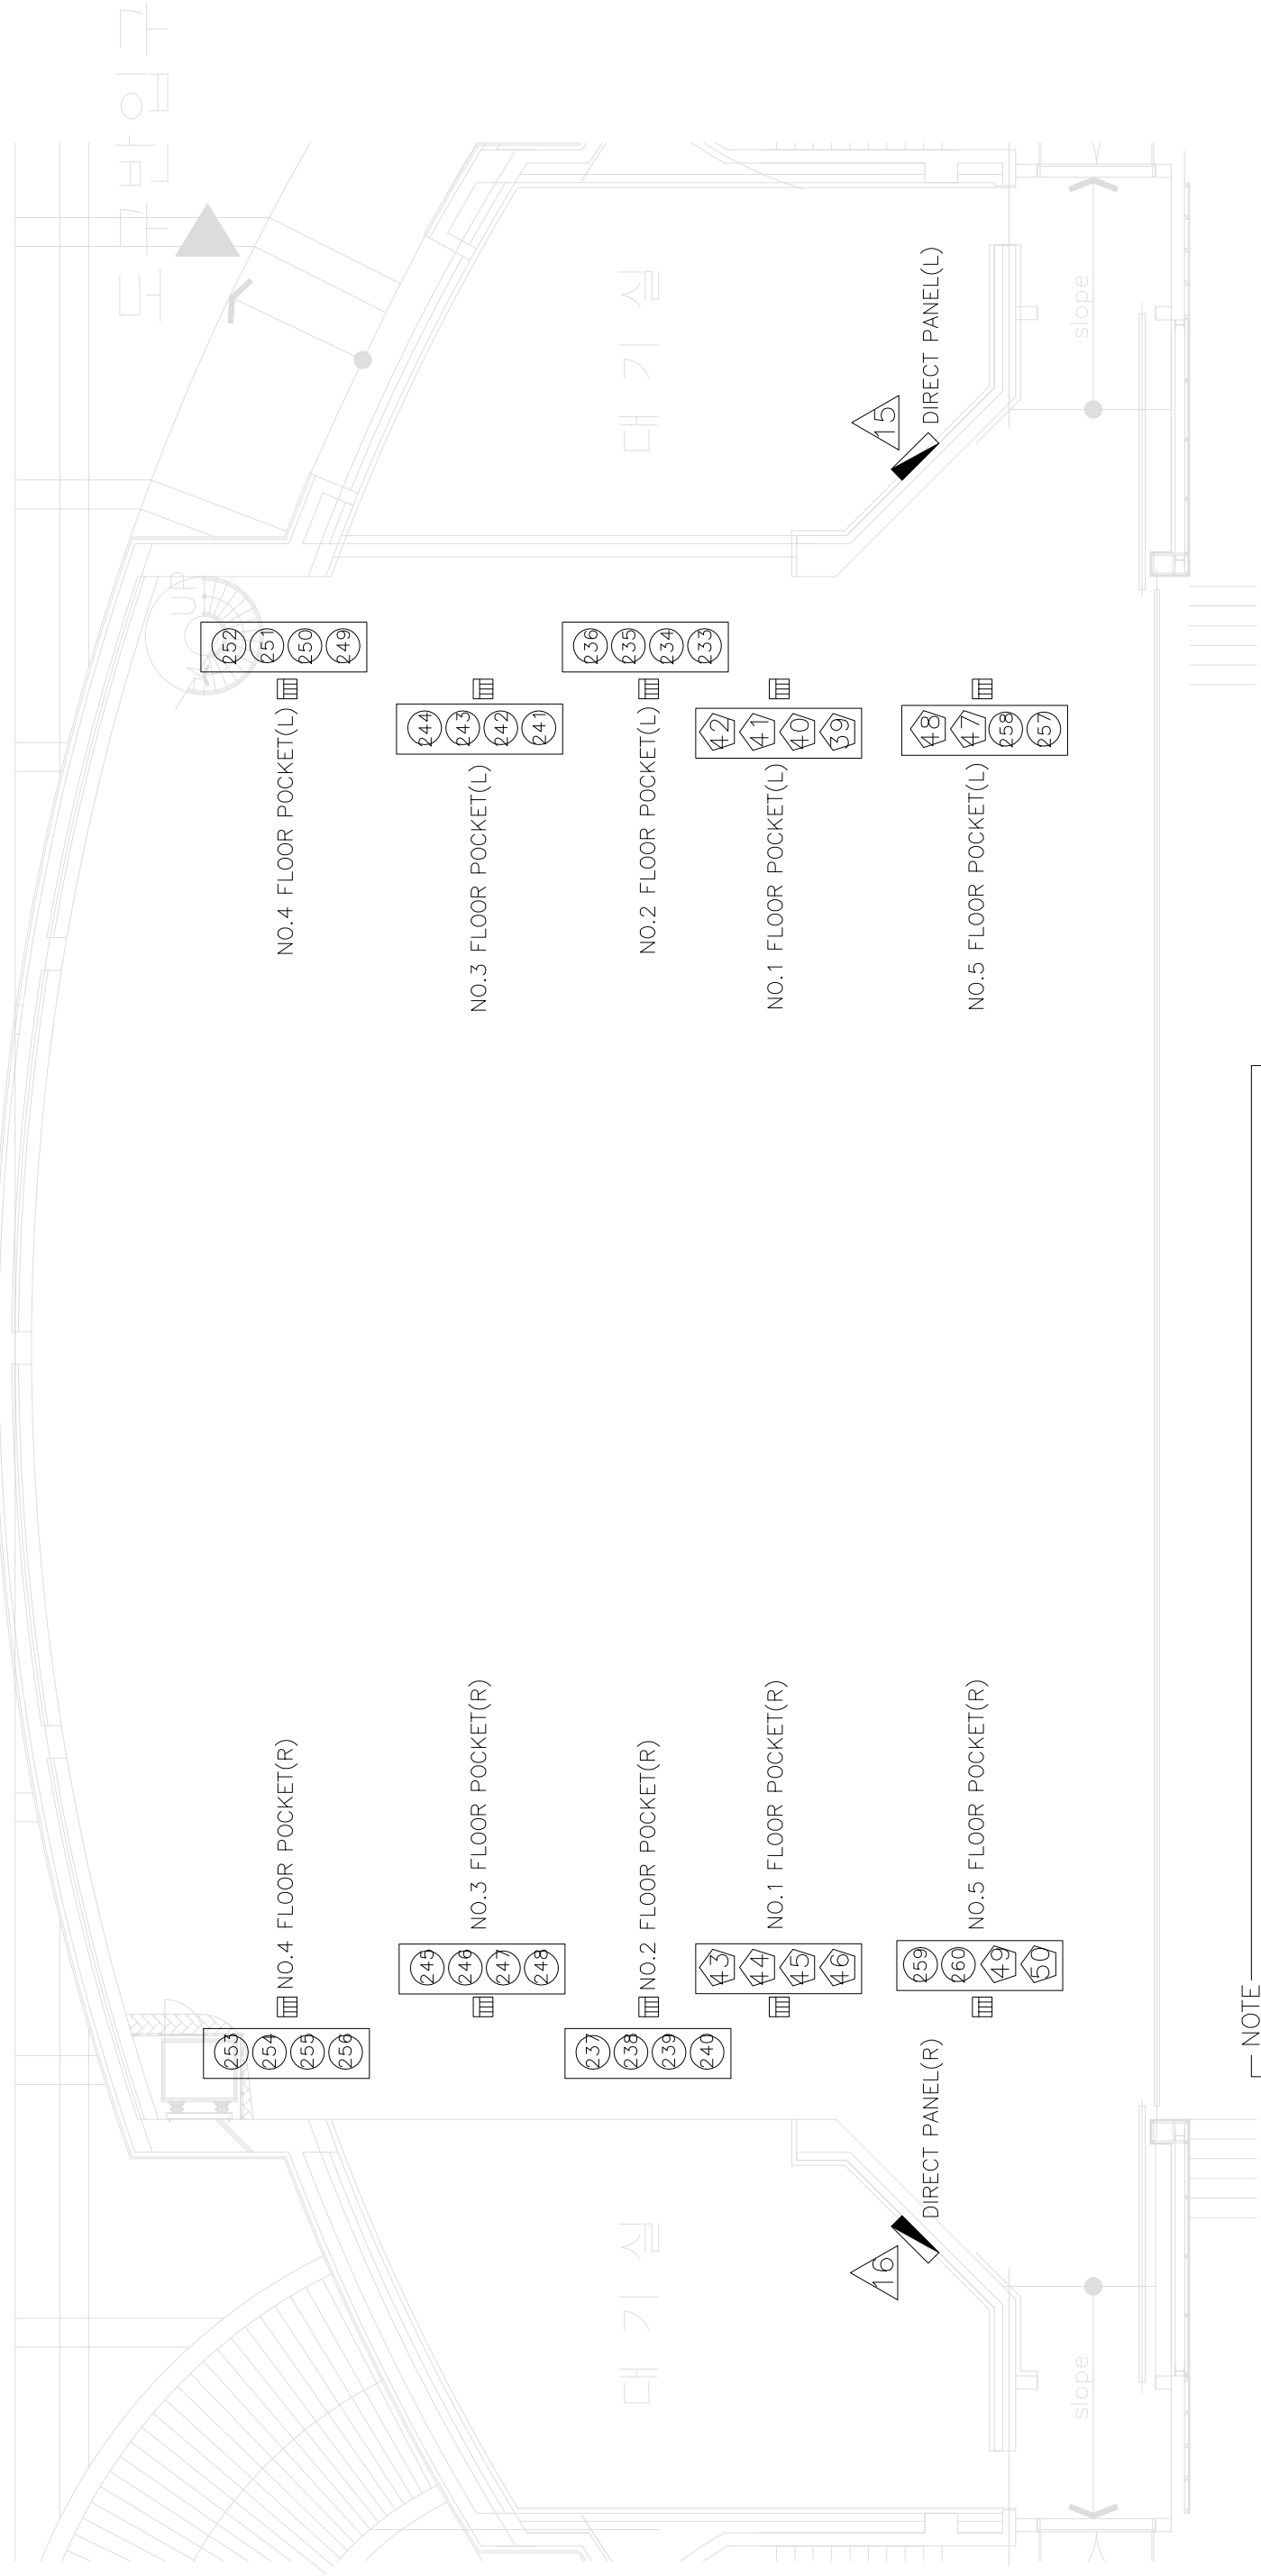

NOTE

NO.1 FLOOR POCKET(L) - RD39 ~ 42	NO.4 FLOOR POCKET(L) - DIM249 ~ 252
NO.1 FLOOR POCKET(R) - RD43 ~ 46	NO.4 FLOOR POCKET(R) - DIM253 ~ 256
NO.2 FLOOR POCKET(L) - DIM233 ~ 236	NO.5 FLOOR POCKET(L) - DIM257~258, RD47~48
NO.2 FLOOR POCKET(R) - DIM237 ~ 240	NO.5 FLOOR POCKET(R) - DIM259~260, RD49~50
NO.3 FLOOR POCKET(L) - DIM241 ~ 244	DIRECT PANEL(L) - DMX15
NO.3 FLOOR POCKET(R) - DIM245 ~ 248	DIRECT PANEL(R) - DMX16